# METEOR

LSR1280

UNDERWATER POOL LIGHT





**Operating Instructions** 



# **CONTENTS**

reface	3
eatures	3
recautions	.3
components and Connectors	4
nstallation	5
controls	7
ppearance	g
echnical Specifications	g
ppearance echnical Specifications Varranty	.10



#### **PREFACE**

The METEOR LSR1280 series of a compact ultra-thin underwater pool light with built-in driver is designed to use the latest LED lighting technology.

The surface-mount designed casing enable very simple installation on the flat surface without any surface preparation during construction.

The METEOR LSR1280 series is available in stainless steel casings. The lighting is available in white, blue, green, RGB, WGB or RGBW colors with 12 high-power LEDs.

The multi-color RGB, WGB or RGBW versions allow changing of the color of lighting manually or automatically through the complete (rainbow) spectrum.

The most advanced electronic design with built-in microprocessor enables network connection and simple control of complete group of lights with dimming.


## **FEATURES**

- Innovative Design
- Stainless Steel Ultra-Thin Casing
- 12 Power LEDs Design
- Cool White, Warm White, Blue, Green or Multi-Color RGB / WGB / RGBW Lighting
- High Grade Polycarbonate Glass Optical Window
- Vacuum Metalized Reflector
- Remote Control
- Digital Dimming
- Built-in ASTEL Protocol for DMX512 Control of Multi-Color versions
- Polarity Protection
- Transient Protection
- Thermal Protection
- Wide Range Power Supply
- Low Power Consumption
- Simple Installation
- Optional Accessories for Different Pools Installations

## **PRECAUTIONS**

- The underwater pool light has to be installed and used in accordance with the instructions of this manual only.
- The power supply has to be disconnected before installation.
- Except when the luminaire is installed in an area of the swimming pool that is not used for swimming and the lens is adequately guarded to keep any person from contacting it, the luminaire shall be installed in or on a wall of the pool, with the top of the lens opening not less than 18" below the normal water level of the pool.
- The optical window must be clear and not covered by any kind of isolating or other material.
- The optical window has to be cleaned with a mild soap or detergent and lukewarm water by using a soft cloth or sponge. Do not use abrasive or highly alkaline cleaners. Never scrape with razor blades or other sharp instruments. Benzene, leaded gasoline, acetone or carbon tetrachloride should never be used.
- Do turn power off immediately and refer servicing to qualified service personnel if the underwater pool light does not operate normally following the operating instructions.

## **COMPONENTS AND CONNECTORS**

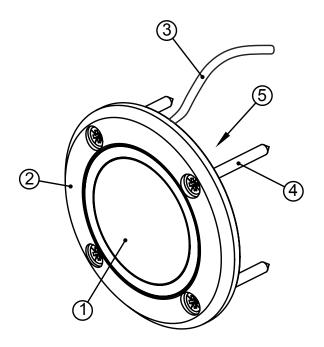

## (1) Optical window

High-grade polycarbonate glass optical window.

## (2) Underwater pool light casing

Stainless steel casing with fixing holes and cable gland.

## (3) Cable

The 4-pole multi-core cable to connect the 12-24Vdc power supply and optional remote control or switch.

#### (4) Fixing screw

The fixing screws to fix the underwater pool light on the wall.

#### (5) Bonding

The terminal to fix the bonding wire equipped with cable lug.


## INSTALLATION

The underwater light kit consists of the following components:

- Underwater Light METEOR LSR1280
- 4 x fixing screw 5.5x50 with wallplugs
- 1 x set of washer, ribbed-washer and M6 self-locking nut for bonding
- Operating Instructions with Declaration of Conformity and Warranty conditions

The METEOR LSR1280 has to be installed on a flat surface on the pool wall under water line. Do not try to install the underwater pool light while the pool is filled with water.

When the installation is finished briefly test the underwater light prior to fill the pool with water. The installation have to be realized by a qualified personnel.

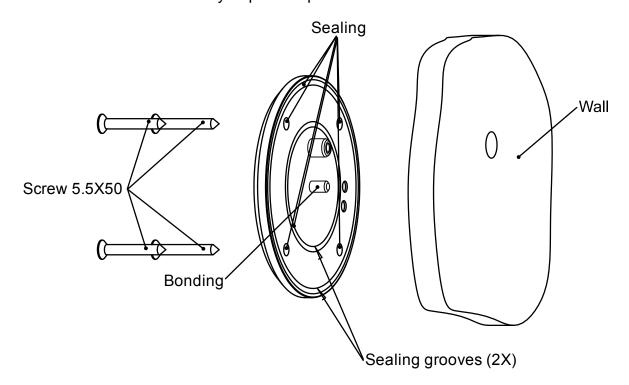

#### Note:

• Avoid using the underwater pool light out of the water – submerge before lighting.

#### Wall preparation

To fix the underwater pool light with screws 5.5x50 the diameter of holes drilled into the wall has to be 8mm/0.32".

#### Sealing

Before inserting the cable with gland through the hole the sealant has to be used into the grooves, around the four fixing holes, around the gland and bonding terminal wire in the rear surface of the underwater pool light.

The sealant can be on silicon basis but the best solution is MS polymer sealant.

#### **Fixing**

The underwater light has to be fixed with four screws 5.5x50 with wallplugs.

#### Note:

• Do not overtighten the screws as this can result in underwater pool light damage.

#### **Bonding**

The bonding of the underwater pool light is realized by using a pre-tinned green wire with a yellow stripe a minimum of 8 AWG (8.36 mm<sup>2</sup>). The wire has to be connected to the rear side of underwater pool light by the help of prepared fixing terminal M6 and optional cable lug fixed by included set of nut, washer and ribbed-washer, signed by bonding label.

#### Connection

The power supply has to be connected through the main switch (not included) with correct polarity and protected by a fuse (not included). The power supply voltage has to be from 10 - 30Vdc.

#### Note:

• The power supply has to be switched off before installation.

The underwater light has to be connected as described in the table below:

METEOR LSR1280 wire color	FUNCTION	
Red	+ DC Power Supply	
Black	GND Power Supply	
Orange	+ Control	
Brown	GND Control	

#### Remote control and network connection

Single-color cool white (W), warm white (WW), blue (B) or green (G) models

To remotely turn-on and turn-off the underwater pool light the simple switch (not included) can be used and connected to the CONTROL wires by a 2-pole signal cable (not included).

#### Note:

• If the remote control is not used at single-color models for normal operation the both CONTROL wires have to be bridged and insulated or connected to the GND.

#### Multi-color RGB (M), WGB (WM), RGBW (MW) models

To control the mode of lighting the simple momentary-switch (not included) has to be used and connected to the CONTROL wires by the 2-pole signal cable (not included).

Optional LXU01 interface can be connected to the CONTROL wires by using a 2-pole signal cable (not included).

#### CONTROLS

<u>Single-color cool white (W), warm white (WW), blue (B) or green (G) models</u> Remote control can be used to turn-on and turn-off the underwater pool light.

#### Multi-color RGB (M), WGB (WM), RGBW (MW) models:

Remote control has to be used to turn-on and turn-off the underwater pool light and to control the mode of lighting and luminosity.

The multi-color underwater pool light can be controlled by using the momentary-switch.

When the light is turned-off the color or mode of lighting can be changed sequentially by pressing the momentary switch for 2 seconds:

RGB (M) Sequence of lighting	WGB (WM) Sequence of lighting	RGBW (MW) Sequence of lighting
Custom Color	Custom Color	Custom Color
Full RGB	Full WGB	Full RGBW
Cool White	Cool White	Neutral White
Bluish White	Bluish White	White
Red	White	Red
Green	Green	Green
Blue	Blue	Blue
Rainbow Color Spectrum	Color Spectrum	White Color Spectrum
		Custom White Color
		(Rainbow) Color Spectrum

#### Turning on /off

Press the momentary-switch shortly.

#### Changing the color or mode of lighting

When the light is turned-off press the momentary-switch for 2 seconds.

#### **Setting the Custom Color**

At the selected Color Spectrum mode press the momentary-switch shortly to turn the light off. After that press the momentary-switch for 5 seconds or until the light is switched to the selected color and then the Custom Color is set and selected.

#### **Dimming**

When the light is turned-on press the momentary-switch until the desired illumination is achieved. By another pressing of the momentary-switch the luminosity will increase to the maximum illumination.

#### Set default

Press the momentary switch for min. 40 seconds or until the light is turned off.

#### **Synchronization**


When more than one multi-color underwater pool light is connected to the system the optional Synchronization Unit LSU08 is recommended to synchronize the colors of lighting at the Rainbow Color Spectrum mode of lighting. On the other case the colors of all installed lights would not be the same after few minutes or hours of operation in the Rainbow Color Spectrum mode.

If the multi-color light is used only with one of the fixed color of lighting the synchronization is not necessary.

## **DMX512** control

The built-in ASTEL protocol enables the network connection to control the lights with the standard DMX512 protocol by using optional LXU01 interface.

## **APPEARANCE**

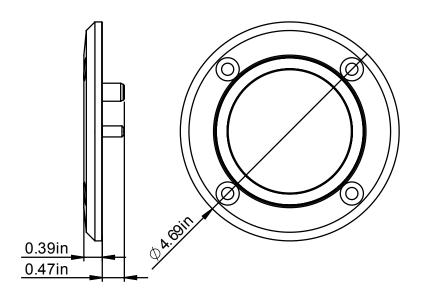

## **TECHNICAL SPECIFICATIONS**

Power supply 12 – 24 Vdc, max. 1.5 A/12 Vdc or 680 mA/24 Vdc

Lens angle 60° (standard)

Optical window High-grade polycarbonate glass

Luminous flux max. 1.900 lm

ASTEL protocol default address

Operating temperature 14°F - 122°F

Casing Stainless steel (SAE316L)

Protection IP 68

Dimensions Ø4.69" x 0.39"

Weight 1.32 lbs

#### WARRANTY

- 1. The equipment manufactured by ASTEL d.o.o. is warranted to be free from defects in workmanship and materials under normal use and service.
- 2. This Warranty is in effect for of two years from the date of purchase by the user. Proof of purchase must be included, to establish that it is inside the warranty period.
- 3. This Warranty is transferrable and covers the product for the specified time period.
- 4. In case any part od the equipment proves to be defective, other than those parts excluded in paragraph 5 below, the owner should do the following:
  - (a) prepare a detailed written statement of the nature and circumstances of the defect, to the best of the Owner's knowledge, including the date of purchase, the place of purchase, the name and adress of the installer, and the Purchaser's name, adress and telephone number;
  - (b) the Owner should return the defective part or unit along with the statement referenced in the preceding paragraph to the warrantor, ASTEL d.o.o., or an authorized distributor, postage/shipping prepaid and at the expense of the Purchaser;
  - (c) if upon the Warrantor's or authorized distributor's examination, the defect is determined to result from defective material or workmanship, the equipment will be repaired or replaced at the Warrantor's option without charge, and returned to the Purchaser at the Warrantor's expense;
  - (d) no refund of the purchase price will be granted to the Purchaser, unless the Warrantor is unable to remedy the defect after having a reasonable number of opportunities to do so. Prior to refund of the purchase price, Purchaser must submit a statement in writing from a professional supplier that the installation instructions of the Operating Instructions manual have been complied with and that the defect remains;
  - (e) warranty service shall be performed only by the Warrantor, or an authorized distributor, and any attempt to remedy the defect by anyone else shall render this warranty void.
- 5. There shall be no warranty for defects or damages coused by faulty installation or hook-up, abuse or misuse of the equipment including exposure to excessive heat, salt or fresh water spray, or water immersion except for equipment specially designed as waterproof.
- 6. There shall be no responsibility or liability whatsoever on the part of the Warrantor or its employees and representatives for injury to any person or persons, or damage to property, loss of income or profit, or any other consequential or resulting damage or cost which may be claimed to have been incurred through the use or sale of the equipment, including any possible failure or malfunction of the equipment, or part thereof.

ASTEL d.o.o., Dutovlje 138, 6221 Dutovlje, Slovenia Tel: +386 5 7310771, +386 5 7310772 Fax:+386 5 7310789

E-mail: info@astel-lighting.com
Web: www.astel-lighting.com